
DC Water Design Extension Manual

Steffen Macke <Steffen_Macke@dorsch.com.jo>

Copyright © 2001-2005 DORSCH Consult

Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.2 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is available from the Free Software Foundation (<http://www.gnu.org>).

Table of Contents

1. Introduction	3
1.1. What is the DC Water Design Extension?	3
1.2. What's New?	3
1.2.1. Version 2.12.3	3
1.2.2. Version 2.12.2	3
1.2.3. Version 2.12.1	4
1.2.4. Version 2.12	4
1.2.5. Version 2.11	4
1.2.6. Version 2.10	4
1.2.7. Version 2.09	5
1.2.8. Version 2.08	5
1.2.9. Version 2.07	5
1.2.10. Version 2.06	5
1.2.11. Version 2.05	5
1.2.12. Version 2.04	5
1.2.13. Version 2.03	6
1.2.14. Version 2.02	6
1.2.15. Version 2.01	6
2. Concepts	6
2.1. Network Traces	7
2.2. Virtual Lines	7
2.3. Byte Codes	8
2.4. Snapping	10
3. Installation	10
3.1. How to Obtain the DC Water Design Extension	10
3.2. Requirements	10
3.3. Setup	10
4. Quick Start Guide	11
5. Usage	11
5.1. General Usage	11
5.2. Project Menus	11
5.2.1. Setup	11
5.2.2. EPANET Tables	12
5.2.3. Result Tables	12
5.2.4. Split Model	12
5.2.5. Merge Model	13
5.2.6. Extract Model	13
5.2.7. About	13
5.3. View Menus	13
5.3.1. Write EPANET File	14
5.3.2. Run EPANET Calculation	14
5.3.3. Import Binary Result File	14
5.3.4. Import EPANET Inp File	14
5.3.5. Check EPANET Model	15
5.3.6. Load Results for Step	15

5.3.7. Make EPANET Model	15
5.3.8. EPANET Themes	15
5.3.9. EPANET Tables	15
5.3.10. Valve Control	16
5.3.11. Make House Connections	16
5.3.12. Create Supply Strings	16
5.3.13. Calculate Pipe Length For Junctions	16
5.3.14. Clip Themes by Bitcode	16
5.3.15. Create Zones from Controls	17
5.3.16. Create Missing Fields	17
5.3.17. Create Missing Junctions	17
5.3.18. Skeletonize Model	17
5.3.19. About DC Water Design Extension	17
5.4. View Tools	17
5.4.1. Flip Polylines	17
5.4.2. Move Nodes	18
5.4.3. Split Pipe (Add Junction)	18
5.4.4. Edit Pipe Vertices	18
5.4.5. Change Node Class	18
5.4.6. Delete Feature	18
5.4.7. Digitize Junction	18
5.4.8. Digitize Pipe	19
5.4.9. Digitize Tank	19
5.4.10. Digitize Valve	19
5.4.11. Digitize Reservoir	19
5.4.12. Digitize Pump	19
5.5. View Context Menus	19
5.5.1. Show Pipe Table Entry	19
5.5.2. Edit Pipe Table Entry	19
5.5.3. Select Connected Pipes	20
5.5.4. Select Connected Pipes Interactively	20
5.5.5. Show Node Table Entry	20
5.5.6. Edit Node Table Entry	20
5.5.7. Select Node	20
5.6. Table Buttons	20
5.6.1. Bytecode Calculator	20
5.7. Commandline Tools	21
5.7.1. inp2shp	21
5.7.2. epanet2mysql	21
6. Frequently Asked Questions	21
6.1. Why is there no graphical user interface to the DCWatDes.Bitcode.* functions?	21
6.2. What is the Setup Dialog for?	21
6.3. How do I recalculate the pipe length for all the pipes?	21
6.4. I get strange errors when I try to create the EPANET model. What can I do?	22
6.5. I made a mistake. Why is undo not working?	22
6.6. How do I add rule-based controls?	22
6.7. How do I add the initial status of a pump?	22
6.8. I found a bug in the Extension. What should I do?	22
6.9. How Can I Select All Rows where DC_ID is Longer than 13 Characters?	23
6.10. How Can I Select All Rows where DC_ID Contains Spaces?	23
7. Development	23
7.1. API Documentation	23
7.1.1. DCWatDes.Bitcode.or	23
7.1.2. DCWatDes.Bitcode.xor	24
7.1.3. DCWatDes.Bitcode.and	24
7.1.4. DCWatDes.Bitcode.isSetAsNumber	24
7.1.5. DCWatDes.i18n.createDictionaries	25
7.1.6. DCWatDes.Model.Epanet.Valves.controlByTime	25
7.2. Procedures	25
7.2.1. Release Process	25
8. Copyright	26
8.1. DC Water Design Extension	26
8.2. Apache Software	26

8.3. DC Water Design Extension Manual	26
9. ArcView/EPANET Data Model	26
9.1. Identity	27
9.2. Node	27
9.3. Junction	27
9.4. Tank	27
9.5. Pump	28
9.6. Valve	28
9.7. Pipe	29
9.8. Reservoir	29
9.9. Feature	30
9.10. Pattern	30
9.11. Options	30
9.12. Report	31
9.13. Times	32
9.14. VirtualLine	32
9.15. Curve	32

1. Introduction

This Manual describes the DC Water Design Extension Version 2.12.2+cvcs.

This Document uses Terminology from ArcView and EPANET. Refer to the respective documentation for in-depth explanations.



Important

Be sure to check the *DC Processing Extension* and the *DC Sewer Design Extension* which are also freely available. These extensions provide additional functionality that is very helpful. E.g. the *DC Sewer Design Extension* can be used to draw water network profiles.

1.1. What is the DC Water Design Extension?

The DC Water Design Extension is an Extension to ESRI's ArcView GIS software. Starting with Versions 2.00 the DC Water Design Extension integrates the EPANET 2.00 hydraulic modeling software with ArcView. It allows to store, edit and retrieve EPANET hydraulic models including all options in ArcView. Also it's possible to run the EPANET hydraulic analysis from ArcView and load the results into the GIS.

1.2. What's New?

1.2.1. Version 2.12.3

- Bytecode Calculator byte numbering starts with 1 now instead of 0.
- "Extract Model" allows to select models that should be extracted as well as the folder to which the models should be extracted.
- Robustness improvements for "Extract Model", "Split Model" and "Merge Model".
- Fixed bug in "Split Model" and "Extract Model" that could lead to feature duplication when elements are moved from zone to zone in split models.

1.2.2. Version 2.12.2

- Critical bug fixes for "Load Results for Step ...", "Extract Model", "Merge Model" and "Split Model". The bug could result in involuntary changes to the original data.
- Bug fixes for `DCWatDes.Bitcode.or()` and `DCWatDes.Bitcode.xor()` functions.
- Improved "Bytecode Calculator" functionality (Section 5.6.1, "Bytecode Calculator").
- "Write Epanet File" collapses setting entries of valves to "closed" if they contain "closed".
- "Extract Model" allows now to create one view per model (Section 5.2.6, "Extract Model") and will extract demand junctions to a separate file if a field *HasDemand* is found in the junction table..
- New "Enforce Data Model" option that allows to relax data model checks when editing networks (E.g. sewer or street networks). See Section 5.2.1, "Setup".

1.2.3. Version 2.12.1

- Fixed some packaging and documentation problems.

1.2.4. Version 2.12

- "Select Connected Pipes" looks for "closed" as a substring rather than a closed string (If "Closed Valve" is selected).
- Bitcodes became byte codes (strings) and can distinguish up to 255 zones.
- New "Split Model", "Merge Model" and "Extract Model" functions in the Project GUI (Section 5.2.4, "Split Model", Section 5.2.5, "Merge Model", Section 5.2.6, "Extract Model").

1.2.5. Version 2.11

- INP file import is handling virtual lines now. Function robustness has been improved and error messages are displayed in ArcView.
- More robust "Create Missing Junctions" function.
- Updated documentation
- New installer interface.
- Bug fixes for patterns, help file integration, result import.

1.2.6. Version 2.10

- Switched Documentation to DocBook. Documentation is accessible from DC Water Design Extension Menu now.
- Fixed pattern export
- The extension doesn't use the `power_kw` field of the pump table any more.

1.2.7. Version 2.09

- Bug fix for result import.
- Better handling of curves and patterns.
- Improved "Check Epanet model" functionality.

1.2.8. Version 2.08

- Basic skeletonization function.
- Bug fixes for the "Create Missing Junctions" function.
- Russian localizations (Thanks to Tom Chidley).
- More Arabic localizations (Thanks to Maher Karim).
- Bug fixes for emitterexponent and demandmultiplier export to EPANET INP files.
- Added emitter coefficient as to the junction class.
- Updated documentation.

1.2.9. Version 2.07

- Completely new and much faster EPANET INP import based on the EPANET toolkit and shape-lib. Import function still incomplete: Attributes are omitted.
- French and Arabic localizations.
- Bug fixes for one-node themes, snapping radius, pipe splitting, popup menus and exporting.

1.2.10. Version 2.06

- Fixed several problems when the view contained raster themes.
- EPANET INP import: Fixed junction import, improved performance. Import function still incomplete.

1.2.11. Version 2.05

- Fixed problems for non-NT versions of Windows.

1.2.12. Version 2.04

- Customizable timeout and other improvements for external command calls (Thanks to Melissa Henderson of Lockwood, Andrews & Newnam, Inc.).
- Check EPANET model checks now for pipes that are shorter than the snapping radius.
- Import of EPANET binary result files.
- Preliminary support for importing EPANET INP files: Importing pipes and junctions.

1.2.13. Version 2.03

- Added function to automatically add the theme fields required by the data model.
- EPANET result import works now without MySQL.
- Check EPANET Model provides more checks now and is much faster.
- "Create Missing Junctions": Add additional junctions to make sure that the network topology is sane.
- Updated Documentation.
- Checking for spaces in path names which are not allowed.
- Customizable backdrop map resolution.
- Support for patterns.
- More checks while writing EPANET files.
- Various bugfixes (see ChangeLog for the details).

1.2.14. Version 2.02

- Updated Documentation

1.2.15. Version 2.01

- Updated Documentation.
- Support for Backdrop Maps (Thanks to Roland Salgado, Section 5.3.1, "Write EPANET File" [?]).
- Create Zones From SOV Controls (Section 5.3.15, "Create Zones from Controls").
- Bugfix for coordinate systems using decimal feet (Bug reported by Arnold Strasser).

2. Concepts

This section introduces some concepts which are fundamental in order to understand how the extension works.

2.1. Network Traces

Network Traces can be useful to solve problems related to the network geometry. For example, it's possible to check the connectivity of the network features in a model. Through specifying network features at which the trace should stop, it's possible to isolate supply zones.

See Section 5.5.3, “Select Connected Pipes”.

2.2. Virtual Lines

In the EPANET hydraulic model, pumps and valves are represented as lines. From the hydraulic modeling point of view this makes sense, as the orientation of the valves and pumps is important information. In GIS data, pumps and valves are typically represented as points, as they are also symbolized with point symbols. Point data is lacking the orientation information. Because of the pipe-node duality pipes and valves will be referred to as virtual lines in this section.

The pipe-node duality complicates the creation of hydraulic models from the GIS data. It is possible to overcome the problem with one of the following solutions:

- Storage of orientation information for each virtual line in the GIS
- Take over the orientation of connected pipes

The second possibility has some advantages, as it does not require additional data storage - it was applied in the described application. However, it imposes some restraints on the data. The concept to model virtual lines as points in the GIS can be summarized as follows:

- Each virtual line needs to have exactly two pipes connected
- Both connected pipes must be oriented in the same way: One pipe has to start at the virtual line and the other pipe has to end at the virtual line

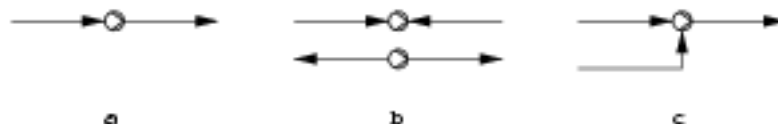


Figure 1. Virtual Line Validity

Figure 1, “Virtual Line Validity” shows examples of different pipe orientations at a virtual line. The case a shows a pump with two pipes connected that are oriented in the same way. This allows the creation of the hydraulic model and is therefore considered valid. Case b shows pumps with pipes connected that are not oriented in the same way. This is invalid as it does not allow the creation of the hydraulic model. Case c is invalid because the pump has more than 3 pipes connected to it. Note that the orientation information of the pump symbol is not necessarily contained in the GIS data.

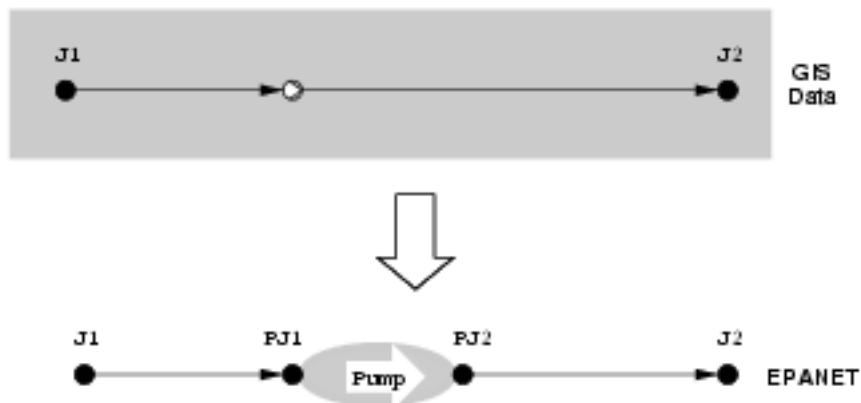


Figure 2. Virtual Line Creation

Figure 2, “Virtual Line Creation” depicts the conversion process of virtual lines:

1. Number and orientation of the pipes connected to the virtual line are checked for validity
2. The virtual node is replaced with a junction (PJ1).
3. An additional junction is added (PJ2).
4. The pipe from the virtual line to the next node starts at the additional junction. (PJ2 -> J2).
5. The pump or valve is created. It connects the two new Junctions (PJ1 -> PJ2).

The DC Water Design Extension follows this conversion process when it is creating EPANET models. Additional considerations used in the process are:

- The length of the virtual line is one metre. Figure 2, “Virtual Line Creation”
- If the pipe starting at the virtual line is shorter than one metre, the virtual line length is set to half of the pipe length.

Virtual Lines provide a concept to convert GIS point data (pumps or valves) into the lines used by the hydraulic analysis software. The conversion is done automatically when the GIS data is exported to the hydraulic model. Virtual Lines require exactly two pipes connected to each pump or valve. In Addition, the two pipes have to have the same digitizing direction (which will be the flow direction in the hydraulic model).

2.3. Byte Codes

Byte codes make it possible to store fields of yes-no information in 'normal' text. Every byte in the number having the value "1" is considered set, every byte of value "0" is not set. Thus making it possible to code several independent pieces of information in one ArcView string.

As ArcView shapefiles allow to store strings of up to 255 characters length, it is possible to store up to 255 pieces of information.

The following example shows how this concept allows storing the network information in one seamless data set and utilizing the same network features in different hydraulic models:

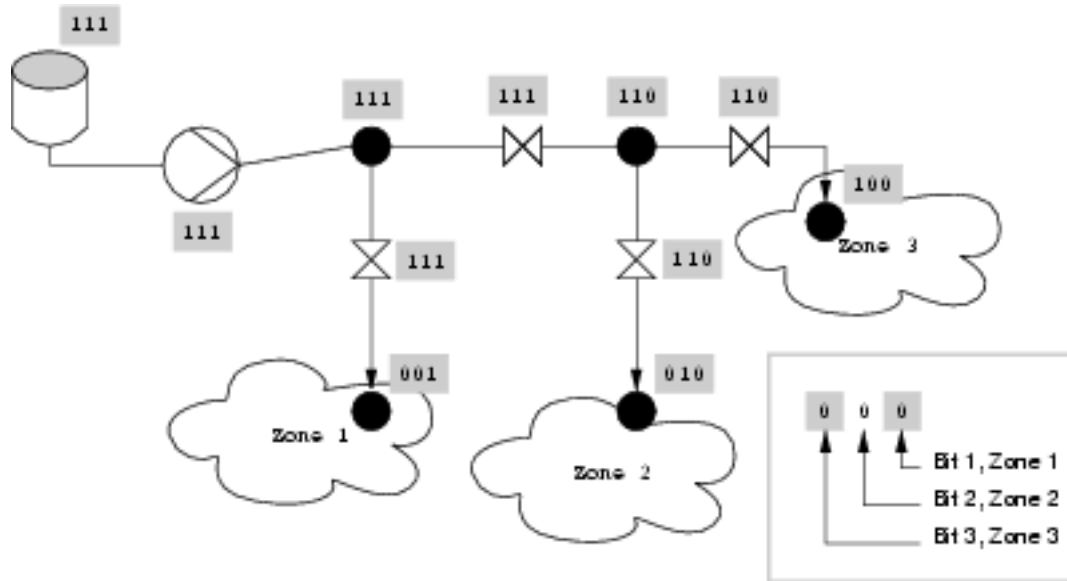


Figure 3. Byte-coding Supply Zones

In Figure 3, “Byte-coding Supply Zones” the nodes of three hydraulic models are byte-coded for storage in the GIS. Each zone has its own byte in the byte code, indicating if the node is used in the model or not.

Byte codes are stored as strings in GIS data. They provide a powerful method to store hydraulic models in GIS data. The underlying principle is very simple:

- The models are numbered
- Each byte represents one supply zone
- If the byte is set ("1") than the network feature is used in the respective model. Otherwise ("0"), the feature is not used in the model.
- The different values are assembled by the following functions:

DCWatDes.Bitcode.and
 DCWatDes.Bitcode.or
 DCWatDes.Bitcode.xor

See Section 7.1, “API Documentation” for details regarding these functions.



Note

Note that the byte numbering starts at 1. You should use a temporary field in order to perform the addition of two byte codes correctly.



Note

Note that you should use a different concept if you want to split up your model for editing purposes.

The byte code concept models a one to many relationship, but for editing purposes, a one to one relationship should be used. This makes the automatic assembly of the model after editing easier.

2.4. Snapping

The editing tools of the DC Water Design Extension use a snapping tolerance equal to 3 screen pixels.

3. Installation

Description of the DC Water Design Extension Installation.

3.1. How to Obtain the DC Water Design Extension

The DC Water Design Extension can be obtained from the website <http://dcwaterdesign.sourceforge.net>.

The sourceforge site offers a multitude of services related to the DC Water Design Extension, including:

- Downloads
- Documentation
- Sources
- Bug Tracker
- Mailing List
- Sample Data

3.2. Requirements

The following software packages are required in order to use the DC Water Design extension:

- ArcView 3.1 or higher (3.2, 3.3), but not ArcView 8.x or 9.x
- Windows 95, 98, ME, NT, 2000 or XP in order to export EPANET files
- EPANET 2.0 or higher is needed in order to run a hydraulic analysis
- An (ANSI SQL compliant) ODBC connection can improve the performance when importing hydraulic analysis results



Note

Note that the commandline tools described in Section 5.7, “Commandline Tools” do not rely on ArcView or the Windows operating system. They are platform independent, however you may have to compile them for your platform.

3.3. Setup

To install the DC Water Design Extension, you've got to run the installer executable. After accepting the license (s. Section 8.1, “DC Water Design Extension”), you'll be prompted to select the installation path. The installation path should be the path to ArcView's EXT32 folder. Usually this should be the default path (c:\ESRI\av_gis30\arcview\EXT32). It might differ for custom ArcView installations. The only thing left to do now is to select which components of the extension should be installed. In general, you should install all the components of the extension.



Note

If you want to use e.g. a newer version of the XSLT parser and you've installed that version already, you might decide not to install the XSLT parser that comes with the extension. Don't do this unless you know what you're doing!

4. Quick Start Guide

1. Load the Extension.
2. Open a View.
3. Add Themes to the View. The Themes should describe your water supply network. Junctions, pipes and reservoirs would comprise a simple network. The attributes of the themes must adhere to the ArcView/EPANET Data Model (see Section 9, "ArcView/EPANET Data Model"). You can use ArcView field aliases to map the fields correctly.
4. Click on the EPANET Themes button. Select the appropriate Themes.
5. If your fieldnames don't match the ones of the data model, choose "Create Missing Fields" from the DC Water Design menu.
6. If required, use the ArcView table calculator to populate the fields. Leaving fields empty is fine in most cases.
7. Choose "Make EPANET Model" from the DC Water Design menu.
8. If the last step didn't yield any errors, you can create an EPANET input file now. Choose "Write EPANET File" from the DC Water Design menu. Choose filename and location. In case of errors, running "Check EPANET Model" might help you to track down the most common error.
9. Fire up EPANET and open the created file (*.inp).

5. Usage

How to use the DC Water Design Extension.

5.1. General Usage

1. Start ArcView
2. Open the Extensions Dialog (File->Extensions ...)
3. Select the DC Water Design Extension (Put a checkmark in the box on the left side).
4. After the Extension is loaded, the Setup Dialog informs you about several settings. You shouldn't change them without knowing what you're doing.

5.2. Project Menus

The DC Water Design Extension extends the Project GUI by adding a new Menu, called DC Water Design Extension. The Menu contains the following choices:

5.2.1. Setup

Shows the Setup Dialog.

The Setup Dialog includes an option to choose the language of the Extension. Currently supported are the following localizations:

- Arabic
- English
- German
- Russian



Note

Note that the Localization is not completed yet. It is therefore recommended that you set the language to English.

The snapping radius used for network traces and model building is also customizable in this dialog. Usually the default setting should be kept.

The backdrop resolution specifies the resolution of the backdrop map if you write your EPANET files with backdrop maps. Set to a higher resolution if required.

The command timeout specifies the time in seconds for which the extension will wait when creating epanet files or running epanet calculations. If the EPANET run doesn't finish in time, there'll be an error message.

Deselecting the Enforce Data Model checkbox allows to relax checks on fields required for EPANET.



Tip

Deselect the Enforce Data Model checkbox when editing street or sewer networks.

5.2.2. EPANET Tables

Displays the EPANET Tables Dialog.

The Tables in the dialog are used to store non-spatial EPANET data with ArcView. Typical examples of such data are pump curves or hydraulic analysis options. Before you can choose a table to use with the DC Water Design Extension, it has to be loaded into ArcView. Refer to the ArcView documentation for information on how to load tables into ArcView.

5.2.3. Result Tables

Opens the Result Tables Dialog.

The Result Tables are used to store the results of a hydraulic analysis. There are two tables, one for node results and one for link results. For performance reasons it is recommended that you use a RDBMS such as MySQL for storing the data.

To allow result file loading without having an RDBMS installed, the dialog provides the opportunity to switch to an result loader that relies on ArcView only.

5.2.4. Split Model

Allows to split a model into different ones.

The values of the *zone* field will be used to determine to which model a network element belongs

The sub-models will be stored in subfolders named like the zones.

Section 5.2.5, “Merge Model” can be used to re-assemble the model automatically.



Caution

The *zone* field has to be filled for all records.

5.2.5. Merge Model

Merge a model that was split by Section 5.2.4, “Split Model”.

Because "Merge Model" is using the zone names from the main pipes theme, it is not possible to add new zones by simply adding a new folder. New zones have to be introduced in the main file first.



Caution

The *zone* field should be filled for all records. Empty fields will be filled with the zone name from the folder.

5.2.6. Extract Model

Extract separate models from the current one based on the *ByteCode* content.

Splits the currently registered themes into several parts. The parts are stored in the *model* folder and numbered according to byte code that is set. For example, all network elements with the first byte set (E.g. "1000") are stored in the folder *model/1*.

The user is asked whether a new view should be created for each model. The views will be named "Model 1", "Model 2"...

If the junction theme has a *HasDemand* field and its filename contains "junction", additional *demandjunction.shp* files will be written to the folder. They contain all the records for the particular model where *HasDemand* is "1".

The definition query for all themes of the model will be removed by this operation.

See Section 2.3, “Byte Codes” for detailed information about byte codes.

Unlike Section 5.2.4, “Split Model” and Section 5.2.5, “Merge Model” this function support one-to-many relationships (One pipe can be part of different models).

5.2.7. About

Displays information about the DC Water Design Extension License. See section Section 8.1, “DC Water Design Extension” for the license details.

5.3. View Menus

The DC Water Design Extension extends the ArcView View GUI with the following elements:

- A new Menu called "DC Water Design"
- Buttons
- Tools

- Three pop-up menus

The pop-up menus are available through clicking the right mouse button over a network feature.

The additional functionality is explained below.

5.3.1. Write EPANET File

Exports the hydraulic model to an EPANET input file.

The model has to be complete, running "Make EPANET Model" and "Check EPANET Model" is advisable especially for the novice user before exporting the EPANET input file.

Optionally, a Backdrop Map is exported together with the EPANET model. This requires additional themes in the View e.g. pressure zones or a street layer. The resolution of the backdrop map can be specified in the setup dialog (see Section 5.2, "Project Menus"). A backdrop will only be written, if the view contains visible themes in addition to the EPANET themes.



Note

The resulting EPANET input file has the extension *.inp. The *.xml-file is just an intermediate format (temporary file).

5.3.2. Run EPANET Calculation

Exports the hydraulic model to an EPANET input file, runs the analysis and loads the results into ArcView.

The model has to be complete, running "Make EPANET Model" and "Check EPANET Model" is advisable especially for the novice user before exporting the EPANET input file.

After the analysis has been completed, the report created by EPANET is displayed in a window and the user is prompted to select a time step for which the results will be loaded.

5.3.3. Import Binary Result File

Loads binary results of an EPANET calculation into ArcView.

The binary results need to result of from an analysis of the EPANET model currently loaded into ArcView.

The user will be prompted to select a time step for which the results will be loaded.

5.3.4. Import EPANET Inp File

Imports an EPANET model from an EPANET INP file.

The EPANET INP format is an ASCII format (it can be easily edited by any text editor) that is documented in the EPANET toolkit. The windows version of EPANET can export models to this format (File -> Export -> Network ...).



Caution

Currently the function will not import the full EPANET model. Be sure to check whether the imported results fit your needs.

The function uses the **inp2shp** command. (Section 5.7.1, "inp2shp").

5.3.5. Check EPANET Model

Performs a number of checks on the hydraulic model.

The checks include the following:

- Check for NULL shapes
- Check for pipes shorter than the snapping radius
- Check for duplicate IDs
- Check for IDs that are too long

5.3.6. Load Results for Step ...

Loads the results of an EPANET hydraulic analysis to ArcView.

The hydraulic analysis has to be run from ArcView in order to enable this feature. The user is prompted to select the time step for which the results should be loaded.

5.3.7. Make EPANET Model

Creates the line-node structure required by EPANET.

This function fills the fields `node1` and `node2` in the links table with the `dc_ids` of the connected nodes. The fields will be overwritten by this function, therefore the user has to confirm the action before the script run.

After completion, a report gives an overview of the created model. Model creation errors are also reported. If there were errors, the features in question are selected after the run.

In case there are reports about inconsistent flow direction at pumps or valves, you can use the "Flip Polylines" tool to correct the errors (Section 5.4.1, "Flip Polylines").

5.3.8. EPANET Themes

Opens the EPANET Themes Dialog.

Use the Dialog to select the themes you want to use in your hydraulic model. The line and node theme are required, other themes are optional and can be switched off with the check boxes on the right side.



Important

Most of the extension functions require that the EPANET Themes are properly set up in this dialog.

Setting up the themes should be the first step when using the extension. The settings are also used to determine which themes should be edited.

5.3.9. EPANET Tables

Displays the EPANET Tables Dialog.

The Tables in the dialog are used to store non-spatial EPANET data with ArcView. Typical examples of such data are pump curves or hydraulic analysis options. Before you can choose a table to use with the DC Water Design Extension, it has to be loaded into ArcView. Refer to the ArcView documentation for information on how to load tables into ArcView.

5.3.10. Valve Control

Allows to set valve states according to EPANET Controls.

If a controls table is registered with the Extension (see Section 5.3.9, “EPANET Tables”), the user is offered to select the controls he would like to apply. All chosen controls are applied. This is very useful in combination with Network Traces as the extension allows to stop traces at closed valves.

5.3.11. Make House Connections

Creates a straight pipe between tanks and junctions which share an id.

This function requires some preparatory work: Each tank of the tanks theme needs to know to which junction he should be connected. This is expressed with a field in the tanks attribute table that contains the dc_id of the junction the tank should connect to. Such fields can be established e.g. by using the spatial join function of the Geoprocessing Wizard.



Note

Note that this functionality has been included mainly for the purpose of modeling intermittent supply with household storage tanks.

It might be taken out or completely rewritten in future versions of the DC Water Design Extension.

5.3.12. Create Supply Strings

Calculates a coded text that shows when a node is supplied with water.

This might only be used after successfully running an EPANET hydraulic analysis from ArcView. The function will query the the nodes results table for pressures above zero. Each pressure above zero will yield a "1" in the supply string, a pressure below or equal zero will yield a "0" in the supply string. For each node, the supply strings are written to a user-selectable text field. The field has to be long enough to contain as many characters as there are time steps in the EPANET results.



Note

Note that this functionality has been included mainly for the purpose of modeling intermittent supply with household storage tanks.

It might be taken out or completely rewritten in future versions of the DC Water Design Extension.

5.3.13. Calculate Pipe Length For Junctions

This function calculates the length of the pipes connected to a junction.

A user selectable number field in the junctions attribute table is filled with the length of the pipes connected to each junction. In order not to double the overall pipe length, each pipe length is divided by two. Thus every part of a pipe is assigned to the nearest node.

5.3.14. Clip Themes by Bitcode

Creates new themes with features which have the same bit set in a bit code.

The function works with all active themes in the view. First, the user is prompted to select the bit which has to be set for the clipped themes. Then the field containing the bit code has to be chosen. (The script assumes that the bit code field names are the same throughout all the active themes.) The user can select the filename and location for each clipped theme. He can also choose whether the new themes should be added to the view.

5.3.15. Create Zones from Controls

Creates a sequence (string) of 0 and 1 for describing if the pipe is connected to a reservoir at over a sequence of hours.

A user selectable text field in the pipe attribute table is filled with a string containing 0's and 1's. The n-th character is a 0 if the pipe is not connected to a reservoir in the n-th hour or 1 if the pipe is connected.

A string "00111" means that the pipe was supplied from the second to the fifth hour.

Such information can be used to automatically determine zones for networks with intermittent supply. Zones are disconnected by the shut off valves. The shut off valves are controlled by the controls table. The supported control syntax is:

```
LINK link_id status AT TIME hours_since_simulation_start
```

The number of traces - which is equal to the number of hours from simulation start - can be chosen by the user. The function requires the Epanet model to be set up correctly (Including valves and controls).

Currently the function only supports networks that contain only shut off valves.

5.3.16. Create Missing Fields

Creates fields required by the data model if they are missing in the EPANET themes.

This allows to quickly create data sets that conform with the EPANET data model.

5.3.17. Create Missing Junctions

Creates all the Junctions that are necessary to have an EPANET Model with the correct topology (a node at every end of a pipe).

5.3.18. Skeletonize Model

Merges all pipeline sections that share a common attribute. You will be prompted to select a field for the attribute comparison. Removes unnecessary nodes.

5.3.19. About DC Water Design Extension

Displays information about the DC Water Design Extension License. See section[sec:dcwatdes-license] for the license details.

5.4. View Tools

Tools that are added to the View GUI.

5.4.1. Flip Polylines

This tool allows to flip the digitizing direction of lines.

The theme containing the lines to be flipped has to be set up as the pipe theme in the EPANET themes dialog. Simple clicking on the line will switch the digitizing direction.



Tip

ArcView's symbology can be used to display the digitizing direction with arrowheads.

5.4.2. Move Nodes

A tool to move network nodes including rubber-banding.

With this tool it's possible to move network nodes (junctions, tanks, reservoirs, pumps, valves) along with the connected pipes. The network stays intact and fully connected (rubber-banding).

The respective themes have to be registered with the extension in the EPANET themes dialog.

5.4.3. Split Pipe (Add Junction)

Tool that allows to split a pipe into two pipes. Adds a new junction at the split point.

The two new pipes inherit the attributes from the original pipe. However, the length gets recalculated based on the shapes.

Pipe and junction themes have to be chosen in the EPANET themes dialog.

5.4.4. Edit Pipe Vertices

Allows to re-shape pipes.

Vertices determine the route of a pipe. The tool makes it possible to move all the vertices of a pipe. Additional, it's possible to add vertices to the pipe. Unlike the ArcView tool "Vertex Edit", "Edit Pipe Vertices" ensures network connectivity - it is impossible to disconnect a pipe from a node with this tool.

The pipe theme has to be set up in the EPANET themes dialog in order to use this tool.



Important

Note that the pipe length is not recalculated.

Recalculate the pipe length manually in the pipe theme attribute table. See the Questions and Answers section of this manual if you have problems calculating the pipe length.

5.4.5. Change Node Class

Tool to convert nodes from one class to another.

The Change Node Class tool allows to convert e.g. a junction into pump. Attributes shared between the two classes are copied. After selecting an existing node, the user is prompted to select the class to which the node should be moved. The old node is deleted.

Obviously, the respective themes have to be registered with the extension in the EPANET themes dialog.

5.4.6. Delete Feature

A tool to delete network features.

Allows one-click deletion of network features. The user is prompted to confirm the deletion. Remember that there's no undo support with the DC Water Design Extension.

The themes containing features that should be deleted have to be selected in the EPANET Themes dialog.

5.4.7. Digitize Junction

The Digitize Junction tool is used to digitize junctions.

The junctions are added to the junction theme selected in the EPANET themes dialog.

5.4.8. Digitize Pipe

The Digitize Pipe tool is used to digitize pipes.

The pipes are added to the pipe theme selected in the EPANET themes dialog. In order to maintain the network integrity, the tool automatically adds junctions at the pipe end if the pipe end doesn't snap onto an existing node.

5.4.9. Digitize Tank

The Digitize Tank tool is used to digitize tanks.

The tanks are added to the tank theme selected in the EPANET themes dialog.

5.4.10. Digitize Valve

The Digitize Valve tool is used to digitize valves.

The valves are added to the valve theme selected in the EPANET themes dialog. The tool is disabled if the valve theme is not enabled in the EPANET themes dialog.

5.4.11. Digitize Reservoir

The Digitize Reservoir tool is used to digitize reservoirs.

The reservoirs are added to the reservoir theme selected in the EPANET themes dialog. The tool is disabled if the reservoir theme is not enabled in the EPANET themes dialog.

5.4.12. Digitize Pump

The Digitize Pump tool is used to digitize pumps.

The pumps are added to the pump theme selected in the EPANET themes dialog. The tool is disabled if the pump theme is not enabled in the EPANET themes dialog.

5.5. View Context Menus

The context menu items described in this section are available if the right mouse button is pressed over a theme that has been registered with the DC Water Design Extension (See Section 5.3.8, "EPANET Themes").

5.5.1. Show Pipe Table Entry

Pop-up menu item that allows to show the attributes of a pipe.

Right-clicking on a pipe and selecting this menu item opens the pipe attribute table, selects and promotes the pipe.

The appropriate pipe theme has to be selected in the EPANET themes dialog.

5.5.2. Edit Pipe Table Entry

Pop-up menu item allowing to edit the attributes of a pipe.

Right-clicking on a pipe and selecting this menu item opens the pipe attribute table, makes it editable, selects and promotes the pipe record. After that, the attributes of the pipe can be edited. Keep in mind that there's no undo.

5.5.3. Select Connected Pipes

Pop-up menu item that allows to trace the pipes connected to the selected pipe.

Right-clicking on a pipe and selecting this menu item opens a dialog that offers node types at which the trace should stop. Multiple types can be selected. During the trace, the status bar informs what percentage of the network has been covered by the trace so far. Note that the progress bar won't make it to 100% unless the network is fully connected and no stopper has been selected. The connected pipes up to all stop points are returned as the selection.



Tip

The option "Closed Valves" will stop if a feature in the valve theme contains the text "closed" in the field *status*.

5.5.4. Select Connected Pipes Interactively

Interactively traces connected pipes.

See Section 5.5.3, "Select Connected Pipes" for more information on network traces.

5.5.5. Show Node Table Entry

Pop-up menu item that shows the attributes of a node.

Right-clicking on a node and selecting this menu item opens the node attribute table, selects and promotes the pipe.

The appropriate node theme has to be selected in the EPANET themes dialog.

5.5.6. Edit Node Table Entry

Pop-up menu item that allows to edit the attributes of a node.

Right-clicking on a node and selecting this menu item opens the node attribute table, makes it editable, selects and promotes the node record. After that the attributes of the node can be edited. Keep in mind that there's no undo.

5.5.7. Select Node

Selects the current node.

Adds the current node to the selection in the node theme.

The appropriate node themes has to be selected in the EPANET themes dialog.

5.6. Table Buttons

Table buttons that are added by the extension.

5.6.1. Bytecode Calculator

The Bytecode Calculator is accessible from the button bar of the table GUI. It is disabled unless the table is editable and a numerical field is selected.

- Upon clicking on the Bytecode Calculator button, the user is prompted to select the bits he wants to set.

- After choosing OK, the bit code will be calculated and written to all the selected records.
- If no records are selected the bit code is written to all the records in the table.
- The field used to store the byte codes should have no decimal places.

See Section 2.3, “Byte Codes” for details regarding byte codes.

5.7. Commandline Tools

Several commandline tools that are available together with the DC Water Design Extension.

If you do not know what a commandline tool is, you may want to skip this section as the DC Water Design Extension provides

Note that these tools don't rely on ArcView and may be used independent of the DC Water Design Extension.

5.7.1. inp2shp

Converts EPANET INP files to a group of shapefiles that conform to the EPANET/ArcView data model.

Used by the EPANET INP import function (Section 5.3.4, “Import EPANET Inp File”).

5.7.2. epanet2mysql

Convert binary EPANET result files to comma separated ASCII files.

Used by several functions (Section 5.3.2, “Run EPANET Calculation”, Section 5.3.3, “Import Binary Result File”, Section 5.3.6, “Load Results for Step ...”)

6. Frequently Asked Questions

6.1. Why is there no graphical user interface to the DCWatDes.Bitcode.* functions?

The provided AVENUE functions are more flexible this way. Bit codes can be useful for quite a number of operations. Try using the functions with the field calculator and the query. Examples are given in Section 7.1, “API Documentation”.

6.2. What is the Setup Dialog for?

The Extension depends on several software packages. The Setup Dialog allows you to use other versions of these software packages than the ones supplied with the Extension itself.

6.3. How do I recalculate the pipe length for all the pipes?

- Open the attribute table of the pipe theme.
- Make sure that the pipe theme is editable.
- Make sure that no records are selected.

- Click on the heading for the length field.
- Click on the field calculator button.
- Enter the following line into the value field:

```
[Shape].returnLength
```

- Click OK.

6.4. I get strange errors when I try to create the EPANET model. What can I do?

Try the following:

- Try "Check EPANET model". This should help you to resolve duplicate IDs.
- Have a close look at the erroneous features: Often accidentally duplicates features cause trouble. Tools like JUMP can help to identify duplicate features

6.5. I made a mistake. Why is undo not working?



Important

Undo support had to be taken out for the sake of editing multiple themes at the same time. Make frequent backups.

You've been warned.

6.6. How do I add rule-based controls?

If you have a text file for simple controls, add lines like the following to it:

```
[RULES]  
  
RULE 1 IF TANK LEVEL 1 ABOVE 19.1  
THEN PUMP 355 STATUS IS CLOSED
```

6.7. How do I add the initial status of a pump?

Just add it to the properties field of the pump like in the following example:

```
HEAD Curve1 SPEED 1.2
```

6.8. I found a bug in the Extension. What should I do?

Please send your bug reports to [<dcwaterdesign-info@lists.sourceforge.net>](mailto:dcwaterdesign-info@lists.sourceforge.net) or use the bug tracker on the website.

6.9. How Can I Select All Rows where DC_ID is Longer

than 13 Characters?

- Click on the Query button.
- Enter the following query text:

```
[dc_id].count > 13
```

- Click the New Set button.

6.10. How Can I Select All Rows where DC_ID Contains Spaces?

- Click on the Query button.
- Enter the following query text:

```
[dc_id].contains(" ") >
```

- Click the New Set button.

7. Development

This section contains information that is relevant to developers. Most probably you only want to read this if you are a programmer.

7.1. API Documentation

This section documents extension scripts that could be used from the field calculator or in queries. In Addition, the script responsible for the extension dictionaries is documented. In general, the API documentation should only be of concern for programmers.

7.1.1. DCWatDes.Bitcode.or

DCWatDes.Bitcode.or performs a bitwise or operation on string numbers.

```
string DCWatDes.Bitcode.or(string a, string b)
```

a byte-coded string

b byte-coded string

Returns: the result of the bitwise a or b as a string

The following AVENUE code can be used in the field calculator to perform of a bitwise or-operation on the fields a and b:

```
av.run("DCWatDes.Bitcode.or", {[a], [b]})
```

7.1.2. DCWatDes.Bitcode.xor

DCWatDes.Bitcode.xor performs a bitwise xor operation on string numbers.

```
string DCWatDes.Bitcode.xor(string a, string b)
```

a byte-coded string

b byte-coded string

Returns: the result of the bitwise a xor b as a string

The following AVENUE code can be used in the field calculator to perform of a bitwise or-operation on the fields a and b:

```
av.run("DCWatDes.Bitcode.xor", {"111", "101"})
```

The result of the example above will be "111".

7.1.3. DCWatDes.Bitcode.and

DCWatDes.Bitcode.and performs a bitwise and operation on string numbers

```
string DCWatDes.Bitcode.and(string a, string b)
```

a bit-coded string

b bit-coded string

Returns: the result of the bitwise a and b as a string

The following AVENUE code can be used in the field calculator to perform of a bitwise and-operation on the fields a and b:

```
av.run("DCWatDes.Bitcode.and", {[a], [b]})
```

7.1.4. DCWatDes.Bitcode.isSetAsNumber

DCWatDes.Bitcode.isSetAsNumber returns whether the n-th byte of a string is set or not

```
integer DCWatDes.Bitcode.isSetAsNumber(string a, integer n)
```

a byte-coded string

n number of the byte to check

Returns: an integer of value 1 in case the n-th byte is set, 0 otherwise

The following AVENUE query can be used to select all the records which have set the 4th bit in the example field (usable with the query tools of view and table GUI):

```
av.run("DCWatDes.Bitcode.isSetAsNumber", {"0001", 3})
```


= 1

The expression will return true

Note that the bit numbering starts at 0. "= 1" is used to convert the numbers 0 and 1 to the boolean values to true or false, respective.



Tip

Note that you can also use the `middle()` function to find out whether a byte is set:

```
"0001".middle(3,1) = "1"
```

7.1.5. DCWatDes.i18n.createDictionaries

Creates the Localization dictionaries of the Extension

In order to add another Dictionary, you'll first have to create one:

```
dicNew = Dictionary.make(100)
```

Then you can start adding dictionary entries:

```
dicNew.add("English Term", "New translated term")
```

Look at the German dictionary for the terms that have to be translated. After you've added all the terms to the new Dictionary, you have to add the Dictionary to the Dictionary of Dictionaries:

```
_dcwDicDictionaries.add("de", dicNew)
```

Where "de" is describes the locale (In this case "de" for Germany).

7.1.6. DCWatDes.Model.Epanet.Valves.controlByTime

Updates the valves status field, reflecting the status at a given time.

All valves are closed before applying the controls.

Expects the timestep as a number as the argument (Hours since simulation start).

Returns nothing.

Requires valves theme and controls table registered with the extension.

Works only for SOV valves. The supported controls syntax is:

```
LINK link_id status AT TIME hours_since_simulation_start
```

7.2. Procedures

Procedures in the development process.

7.2.1. Release Process

Steps that should be followed in the release process.

- Update the version number in `dcwatdes2.apr`, `build.xml`, `doc/en/dcwaterdesign.xml`, `installer/dc_water_design_extension.nsi`.
- Build the documentation using **ant** and `doc/build.xml`.
- Build the installer using **NSIS** and `installer/dc_water_design_extension.nsi`.
- Test the installer.
- Build the source zip file using **ant** and `build.xml`.
- Upload the files to `ftp://upload.sourceforge.net/incoming/`
- Create the release on Sourceforge.
- Create a Sourceforge news item
- Announce the release on the EPANET, DC Water Design mailing lists.

8. Copyright

Copyright information for the various components of the DC Water Design Extension.

8.1. DC Water Design Extension

DC Water Design Extension. This ArcView Extension integrates EPANET with ArcView.

Copyright (C) 1998-2005 DORSCH Consult

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA

8.2. Apache Software

testXSLT (Xalan C++) Copyright (C) 2000 Apache Software Foundation. All rights reserved.

Visit <http://xml.apache.org> for the details and/or sources.

8.3. DC Water Design Extension Manual

Permission is granted to copy, distribute and/or modify this document under the terms of the GNU Free Documentation License, Version 1.2 or any later version published by the Free Software Foundation; with no Invariant Sections, no Front-Cover Texts, and no Back-Cover Texts. A copy of the license is available from the Free Software Foundation (<http://www.gnu.org>).

9. ArcView/EPANET Data Model

This section describes the ArcView/EPANET Data Model. Note that the units will change if EPANET is not set to use liters per second (LPS) as units. Refer to the EPANET documentation (especially the toolkit help) for further information.

9.1. Identity

Inherited by Feature

Inherited by Pattern

Inherited by Curve

- dc_ID:string Unique ID throughout the whole database. Should not contain spaces.

9.2. Node

Inherits from Feature

Inherited by Junction

Inherited by Tank

Inherited by Reservoir

Inherited by VirtualLine

- Shape: Point Spatial data.
- Elevation: float Elevation above Sea Level in m.
- result_demand: float EPANET analysis result: Demand in liters per second.
- result_head: float EPANET analysis result: Total Head in m.
- result_pressure: float EPANET analysis result: Pressure in m.
- ElevationSource: CodedValue Integer field containing a coded value that describes the origin of the elevation information for this node.

9.3. Junction

Inherits from Node

- Demand: float Base demand flow in liters per second.
- Pattern: string Demand Pattern ID. If no demand pattern is supplied then the junction follows the Default Demand Pattern provided in the Options Table, or Pattern 1 if no Default Pattern is specified. If none of the patterns exist, the demand will remain constant.
- EmitterCoefficient: float Flow Coefficient. Flow units at 1 m pressure drop. E.g. 1l/s at 1m pressure drop.

9.4. Tank

Inherits from Node

- Initiallevel: float Initial water level above the tank bottom level (the elevation field) in m.
- Minimumlevel: float Minimum water level above the tank bottom level in m.
- Maximumlevel: float Maximum water level above the tank bottom level in m.
- Diameter: float Nominal Diameter of the tank in m. If a volume curve is supplied this can be any non-zero number.
- Minimumvolume: float The minimum volume of the tank in cubic meters. Can be zero.
- Volumecurve: string The id of the volumecurve - for non-cylindrical tanks.

9.5. Pump

Inherits from VirtualLine

- Properties: string EPANET properties of the pump. Keyword(s) followed by value(s). Keywords consist of:
 - POWER pump power in kW
 - HEAD id of the head curve describing this pump
 - SPEED relative speed of the pump: 1.0 is normal, 0 means that the pump is off.
 - PATTERN id of the time pattern describing pump operation.

9.6. Valve

Inherits from VirtualLine

- Diameter: integer Diameter of the valve in mm.
- Type: string Type of the valve. The following EPANET valve types are valid:
 - PRV pressure reducing valve
 - PSV pressure sustaining valve
 - PBV pressure breaker valve
 - FCV flow control valve
 - TCV throttle control valve
 - GPV general purpose valveAdditional valve types supported by the DC Water Design Extension:
 - CV check valve
 - SOV shutoff valveEPANET models check valves and shutoff valves as pipes. The extension will create the necessary pipes on the fly (Virtual Lines, see Section 2.2, "Virtual Lines").
- Setting: string Valve type dependent setting. The setting field takes the following values for the different valve types:
 - PRV the pressure in m

- PSV the pressure in m
- PBV the pressure in m
- FCV the flow in liters per second
- TCV the loss coefficient
- GPV the id of the head loss curve
- CV the setting value will be mapped to the status field of the pipe
- SOV the setting value will be mapped to the status field of the pipe
- Minorloss: float Minor loss coefficient of the valve.

9.7. Pipe

Inherits from Feature

- Shape: Polyline Spatial data.
- node1: string Start node dc_id.
- node2: string End node dc_id.
- length: float The length of the pipe in m.
- diameter: integer Nominal pipe diameter in mm.
- roughness: float Pipe roughness coefficient in mm.
- minorloss: float Minor loss coefficient.
- status: string Status of the pipe. The following values are valid:
 - OPEN
 - CLOSED
 - CV (check valve)
- Material: CodedValue Integer field containing a coded value describing the material of the pipe.
- result_flow: float EPANET analysis result: The flow in liters per second.
- result_velocity: float EPANET analysis result: Flow velocity in meters per second.
- result_headloss: float Headloss over the pipe in m.

9.8. Reservoir

Inherits from Node

- Head: float The hydraulic head of the reservoir. Elevation + pressure head.
- Pattern: string Optional head pattern id.

9.9. Feature

Inherited by Node

Inherited by Pipe

Inherits from Identity

- **Installation_date:** date The date of installation. If this is a date in the future, the feature is planned.
- **Abandon_date:** date The date when the feature was abandoned.
- **dcSubtype:** CodedValue Integer field containing coded values describing the feature. Different Domains are applied to the Feature classes.
- **BitcodeZone:** integer Integer containing a bit-coded that describes the zones in which the Feature is used.

9.10. Pattern

Inherits from Identity

- **multiplier:** float The multiplier that describes how to adjust the base quantity.

9.11. Options

- **Units:** string LPS (liters per second) should be used. See the EPANET documentation for other flow units. Using other flow units will render the units specified in this document invalid.
- **Headloss:** string Headloss equation. D-W (Darcy-Weissbach) should be used.
- **Hydraulics:** string Allows to specify a filename for the hydraulic solution. Leave empty.
- **Viscosity:** float The kinematic viscosity of the fluid being modeled relative to that of water at 20°C. The default value is 1.0.
- **Diffusivity:** float The molecular diffusivity of the chemical being analyzed relative to that of chlorine in water. The default value is 1.0.
- **Specificgravity:** float The ratio of the density of the fluid being modeled to that of water at 4°C.
- **Trials:** integer The maximum number of trials used to solve the network hydraulics for each time step. The default is 40.
- **Accuracy:** float Convergence criterion that describes when a hydraulic solution is found. The default is 0.001.
- **Unbalanced:** string Determines what happens if no hydraulic solution can be found within the prescribed number of time steps. The following values are valid:
 - STOP
 - CONTINUE
 - CONTINUE n
The default is STOP
- **pattern:** string The default demand pattern id that is applied to all junctions that don't have a pat-

tern specified. If this is empty, the default "1" is used.

- Demandmultiplier: float Global Demand multiplier. Applied to all base demands of junctions. The default value is 1.0.
- emitterexponent: float Specifies the power to which the pressure at a junction is raised when computing the flow issuing from an emitter. The default is 0.5.
- tolerance: float The difference in water quality level below which parcels of water are considered of equal value. The default is 0.01.
- Itemizemap: string The name of a file containing junction coordinates.

9.12. Report

- Pagesize: integer The number of lines on one page of the output report. The default is 0 meaning that no limit of lines per page is in effect.
- File: string The name of the report file. Leave empty if you use the DC Water Design Extension.
- Status: string Determines whether hydraulic status messages should be written to the report file. The following values are valid:
 - YES
 - NO
 - FULLThe default is NO.
- Summary: string Determines whether a Summary is generated. The following values are valid:
 - YES
 - NODefault is YES.
- Messages: string Determines whether warning and error messages are written to the report. The following values are valid:
 - YES
 - NOThe default is YES.
- Energy: string Determines whether energy and energy cost reports for pumps should be written to the report file. The following values are valid:
 - YES
 - NOThe default is NO.
- Nodes: string Determines which nodes will be reported on. The following values are valid:
 - NONE
 - ALL
 - dc_id1 dc_id2 dc_id3 ...The default is NONE.
- Links: string Determines which links will be reported on. The following values are valid:

- NONE
 - ALL
 - dc_id1 dc_id2 dc_id3 ...
- The default is NONE.

9.13. Times

Times can be specified in SECONDS(SEC), MINUTES (MIN), HOURS or DAYS. Just enter the unit name after the value. The default time unit is hours.

- Duration: string The duration of the simulation.
- Hydraulicimestep: string Determines how often a new hydraulic solution is computed. The default is 1 hours.
- Qualitytimestep: string Determines how often the water quality is computed. The default is 1/10 of the hydraulic time step.
- Ruletimestep: string Used with rule-based controls. Defaults to 1/10 of the hydraulic time step.
- Patterntimestep: string The interval between time periods in all time patterns. The default is 1 hour.
- Patternstart: string Describes when the pattern cycle will be started. Defaults to 0.
- Reporttimestep: string The interval in which results will be reported. The default is 1 hour.
- Reportstart: string Determines the time when reporting starts. The default is 0.
- Startclocktime: string The time of the day at which the simulation starts. The default is 12 AM (midnight).
- Statistic: string Determines the type of statistical post-processing. The following values are valid:
 - NONE
 - AVERAGED
 - MINIMUM
 - MAXIMUM
 - RANGE

9.14. VirtualLine

Inherited by Pump

Inherited by Valve

Inherits from Node

- result_flow: float EPANET analysis result: The flow in liters per second.
- result_velocity: float EPANET analysis result: Flow velocity in meters per second. result_headloss:float Headloss over the pipe in m.

9.15. Curve

Inherits from Identity

- dc_x: float X value.
- dc_y: float Y value.